


Radio C1

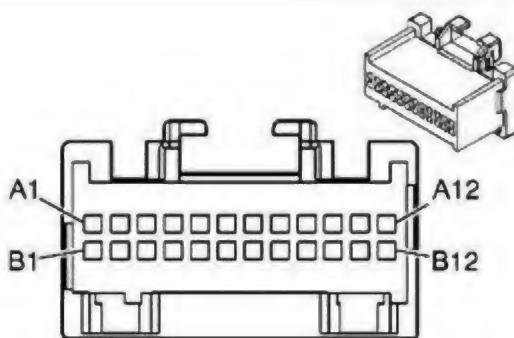

Connector Part Information

• OEM: 12110206

• 24-Way F Micro-Pack 100 Series (L-BU)

Pin	Wire Color	Circuit No.	Function
A1	GY	118	Left Front Speaker Signal (-) (1) (U1C)
A1	D-GN	1947	Left Front Low Level Audio (-) (US8)
A2	TN	201	Left Front Speaker (+) (1) (U1C)
A2	TN	511	Left Front Low Level Audio Signal (US8)
A3	L-BU	115	Right Rear Speaker Signal (-) (U1C)
A3	TN	1946	Right Rear Low Level Audio (-) (US8)
A4	D-BU	46	Right Rear Speaker (+) (U1C)
A4	D-BU	546	Right Rear Low Level Audio Signal (US8)
A5	BN	199	Left Rear Speaker (+) (U1C)
A5	BN/WH	599	Left Rear Low Level Audio Signal (US8)
A6	YE	116	Left Rear Speaker Signal (-) (U1C)
A6	BN	1999	Left Rear Low Level Audio (-) (US8)
A7	L-GN	200	Right Front Speaker (+) (1) (U1C)
A7	L-GN/WH	512	Right Front Low Level Audio Signal (US8)
A8	D-GN	117	Right Front Speaker Signal (-) (1) (U1C)
A8	L-GN	1948	Right Front Low Level Audio (-) (US8)
A9	D-BU	1796	Steering Column Radio Control Signal (UK3)
A10	WH/BK	644	10-Volt Reference (US8)
A11	--	--	Not Used
A12	BK/WH	1051	Signal Ground
B1	RD/WH	1140	Battery Positive Voltage
B2	--	--	Not Used
B3	L-GN	1011	Remote Radio Control Signal (US8)
B4-B5	--	--	Not Used
B6	PK	314	Radio On Signal
B7-B8	--	--	Not Used
B9	D-GN	5060	Low Speed GMLAN Serial Data
B10-B12	--	--	Not Used

Components

Car Radio Battery Constant 12V+ Wire

Car Radio Accessory Switched 12V+ Wire

Car Radio Ground Wire

Car Radio Illumination Wire

Car Radio Dimmer Wire

Left Front Speaker Positive Wire (+)

Left Front Speaker Negative Wire (-)

Right Front Speaker Positive Wire (+)

Right Front Speaker Negative Wire (-)


Left Rear Speaker Positive Wire (+)

Left Rear Speaker Negative Wire (-)


Right Rear Speaker Positive Wire (+)

Right Rear Speaker Negative Wire (-)

REAR VIEW AND CONNECTORS

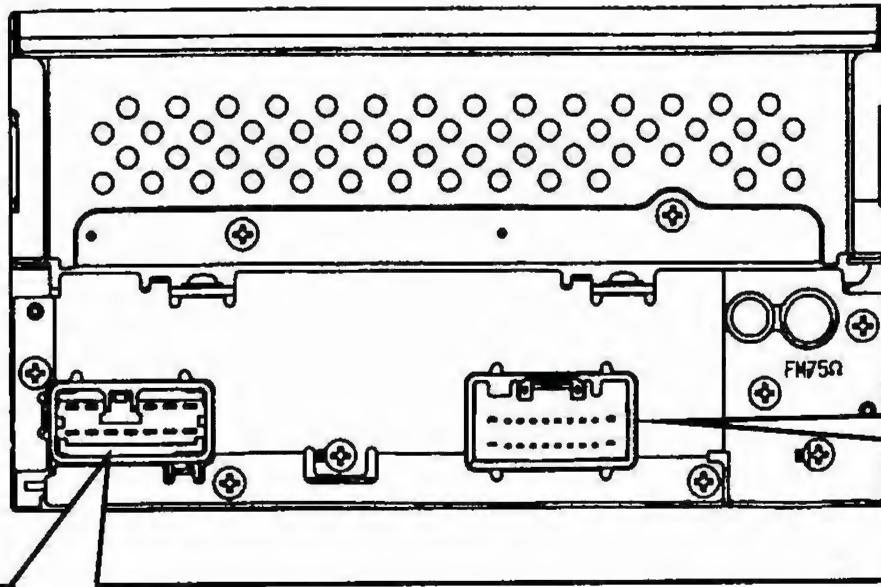


<CN702 12P CONNECTOR>

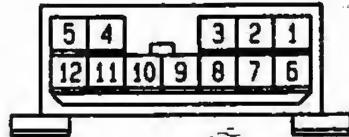

1. Audio Right (+)	7. Audio Left (-)
2. Audio Left (+)	8. Ground
3. Signal Ground	9. Communication TX (-)
4. Mute	10. Communication TX (+)
5. Power Supply, +B	11.
6. Audio Right (-)	12. Power Supply, ACC

REAR VIEW AND CONNECTORS

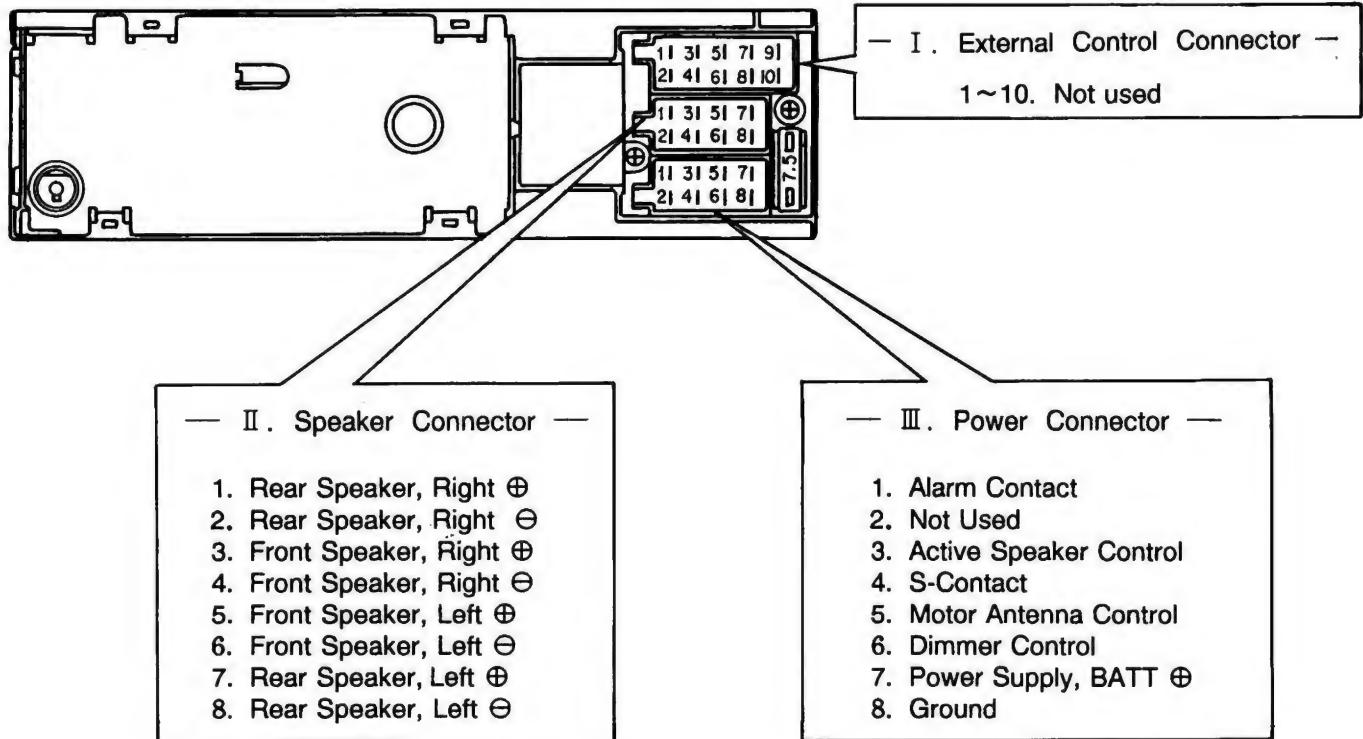

Components
Car Radio Battery Constant 12V+ Wire
Car Radio Accessory Switched 12V+ Wire
Car Radio Ground Wire
Car Radio Illumination Wire
Car Radio Antenna Trigger Wire
Car Audio Front Tweeter Size
Car Audio Front Tweeter Depth
Left Front Speaker Positive Wire (+)
Left Front Speaker Negative Wire (-)
Right Front Speaker Positive Wire (+)
Right Front Speaker Negative Wire (-)
Car Audio Front Speakers Size
Car Audio Front Speakers Depth
Left Rear Speaker Positive Wire (+)
Left Rear Speaker Negative Wire (-)
Right Rear Speaker Positive Wire (+)
Right Rear Speaker Negative Wire (-)
Car Audio Rear Speakers Size

